



DNH

HEAD OFFICE, NORWAY

DNH AS

Phone..... + 47 35 98 56 00

Fax..... + 47 35 98 56 10

E-mail..... dnh@dnh.no

Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

USA

DNH Speakers Inc



Phone..... + 1 484 494 5790

Fax..... + 1 484 494 5793

E-mail..... dnh@dnhspeakers.com


CAR-4(T)

ISO 9001 CERTIFIED

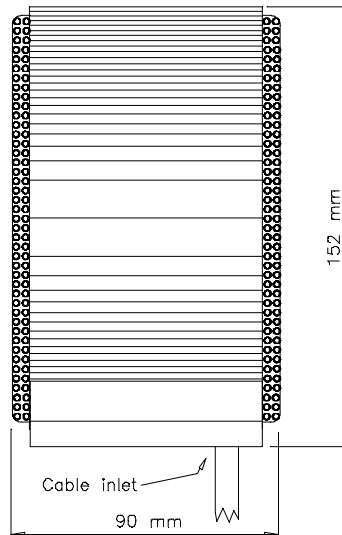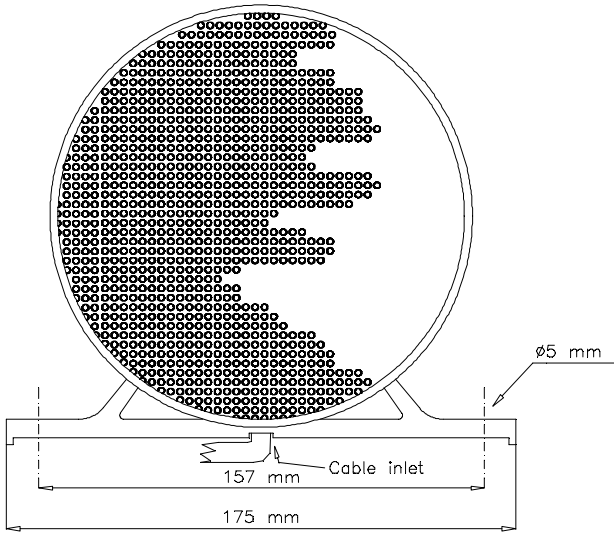


Circuit diagram

Transformer

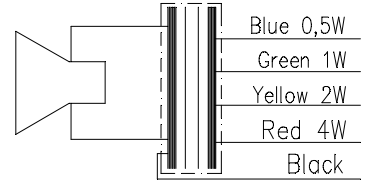


Low impedance

 

100 V Primary nominal tapings	
Black : Red	4,0W
Black : Yellow	2,0W
Black : Green	1,0W
Black : Blue	0,5W

SPL at 1W/1m with P5 / 15T

SPL vs Freq

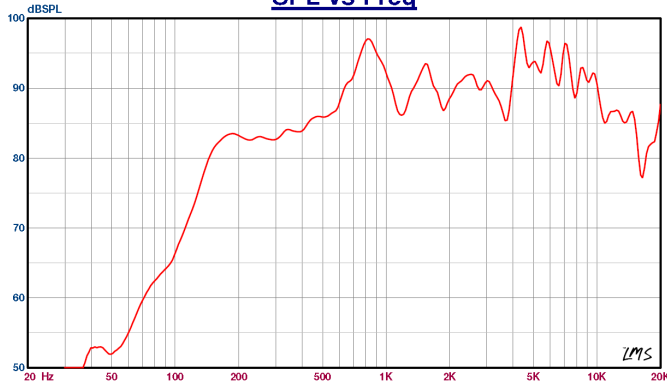

Specifications

Material / Color	Aluminum / RAL9010 or Anodized
Mounting	Foot bracket
Termination	Cable, 1m
Weight w/transformer	1,3 Kg
Max. / min. amb. temp	90°C / -40°C
Rated power	4W
SPL 1W/1m	90 dB
SPL rated power	96 dB
Effective freq. range	150 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	2x180° / 2x50° (bidirectional)
Options	Impedance, colors, labels

Installation, Operation and Maintenance Procedures

- Fasten bracket with screws and terminate cable to a suitable junction box.
- For optimum performance always use the correct voltage / power and operate within the frequency limits as stated.
- This loudspeaker is supplied with two years warranty against defective workmanship.

DNH reserves the right to alter specifications without notice.

