



Web-Site..... www.dnh.no

CW-4(T)

ENGLAND

DNH WW Ltd


Phone.....+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk GERMANY


DNH GmbH


 <u>USA</u> DNH Speakers Inc

CIRCUIT DIAGRAM

Phone......+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

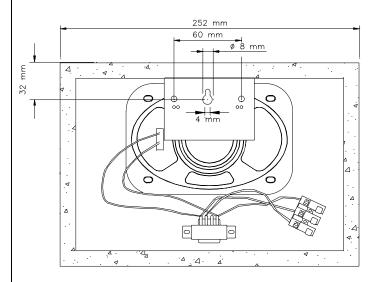


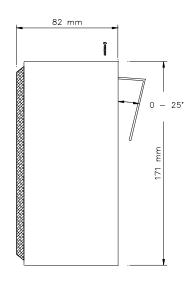

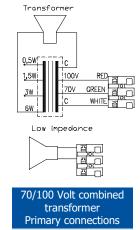

Primary connections
White: Green 70 V
White: Red 100 V

Secondary nominal tappings
C: 6 6,0 W
C: 3 3,0 W
C: 1,5 1,5 W
C: 0,5 0,5 W

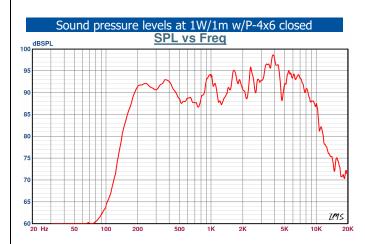

| Specifications | |
|-------------------------------|------------------------|
| Material / Color | Particle board /walnut |
| Mounting | Screws, keyhole |
| Termination | Spring clamps |
| Weight w/transformer | 1,25 kg |
| IP-rating | NA |
| Max. / min. amb. temp | 90°C / -20°C |
| Rated power | 6W |
| SPL 1W/1m | 90 dB |
| SPL rated power | 97 dB |
| Effective freq. range | 150 – 15000 Hz |
| Dispersion (-6dB) 1kHz / 4kHz | 140° / 120° |
| Options | Impedances, labels |

Installation, Operation and Maintenance Procedures

- Connect to terminal (70V or 100V) and select required tapping in to the transformer.
- Screw the bracket on the wall and fasten the cabinet to the bracket with one screw.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.