



Web-Site		v	٧W١	w.d	nh	.no
E-mail		0	dnb	@0	lnh.	.no
Fax	+	47	35	98	56	10
Phone	+	47	35	98	56	00

<u>NGLAND</u>


Phone+ 44	1908 275 000
Fax+ 44	1908 275 100
E-maild	nh@dnh.co.uk


<u>GERMANY</u>

Phone + 49 040 6569 30-0
Fax + 49 040 6569 30-30
E-maildnh@dnh.de


H-62S(T)

Ditti Op	cakers inc
Phone	+ 1 484 494 579
Fax	+ 1 484 494 579
E-maildnl	n@dnhspeakers.cor

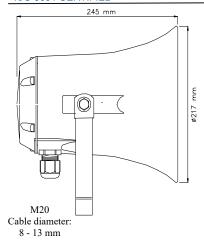


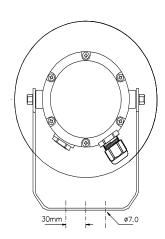

Bracket and all outside nuts and bolts in stainless steel

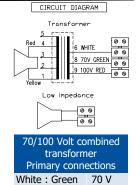

White : Red	100 V			
Secondary				
nominal tap	pings			
1:4	25,0W			
1:3	12,5W			
2:4	8,0W			
1:2	7,0 W			
3:4	3,0W			
2:3	1.7W			

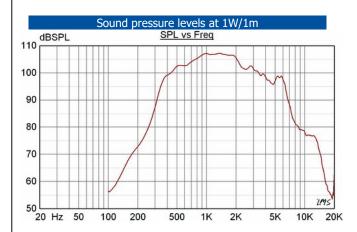

Specifications		
Material / Color	Aluminum / RAL7035	
Mounting	Bracket	
Termination	Screw terminal	
Weight w/transformer	3,9 kg	
IP-rating	55	
Max. / min. amb. temp	150°C / -50°C	
Rated power	25 W	
SPL 1W/1m	109 dB	
SPL rated power	122 dB	
Effective freq. range	300 – 7000 Hz	
Dispersion (-6dB) 1kHz / 4kHz	115° / 30°	
Options	Impedances, colors, labels	

Installation, Operation and Maintenance Procedures

- Fasten the loudspeaker to the wall with three screws on the bracket.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- Open the lid by six crews.
- Connect to terminal (70V or 100V) and select required tapping into the transformer.
- Fasten lid with a torque of 2 3 Nm.
- H-62S is designed to withstand sound shocks (maximum 175 dB)
- The aluminum surface of the loudspeaker should be regularly treated with paint at the same interval as with other similar outdoor equipment.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open while energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

CE