



Fax.....+ 47 35 98 56 10

Web-Site..... www.dnh.no

.....dnh@dnh.no

Phone....+

HS-15S(T)

ENGLAND DNH WW Ltd


Phone...... + 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk


GERMANY DNH GmbH

 
Phone... + 49 040 6569 30-0 Fax...... + 49 040 6569 30-30 E-mail.....dnh@dnh.de

USA DNH Speakers Inc


Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

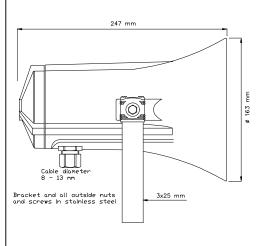

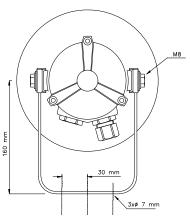



Secondary		
nominal	tappings	
1:4	15 W	
1:3	8,0 W	
2:4	5,0 W	
1:2	4,5 W	
3:4	2,5 W	
2:3	1,0 W	

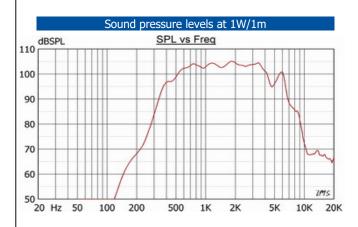

Specifications	
Material / Color	Aluminum alloy / RAL 7035
Mounting	Bracket
Termination	Screw terminal
Weight w/transformer	2,7 kg
IP-rating	55
Max. / min. amb. temp	110°C / -50°C
Rated power	15 W
SPL 1W/1m	107 dB
SPL rated power	118 dB
Effective freq. range	350 – 7500 Hz
Dispersion (-6dB) 1kHz / 4kHz	140° / 50°
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- H-15S is designed to withstand sound shocks (maximum 175 dB).
- Fasten the bracket to wall with 1-3 screws and ensure to use all washers in the same position that the loudspeaker is delivered with. (To isolate the main body from the bracket).
- Open the lid back three screws. Lead cable through cable gland and connect to terminal. Screw lid back into place, three screws with a torque of 2 Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- For optimum performance, always use the correct voltage, power, and operate within the frequency limits as
- The aluminum surface of the loudspeaker should be regularly treated with paint at the same interval as with other similar outdoor equipment.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.