



ISO 9001 CERTIFIED

DNH

HEAD OFFICE, NORWAY

DNH AS

Phone..... + 47 35 98 56 00

Fax..... + 47 35 98 56 10

E-mail..... dnh@dnh.no

Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

USA




DNH Speakers Inc

Phone..... + 1 484 494 5790


Fax..... + 1 484 494 5793

E-mail..dnh@dnhspeakers.com

TRIC-6(T)

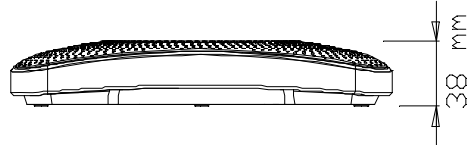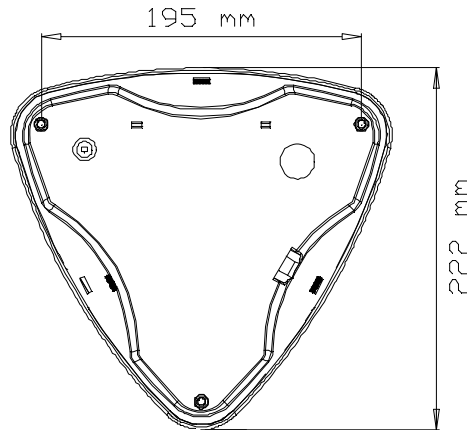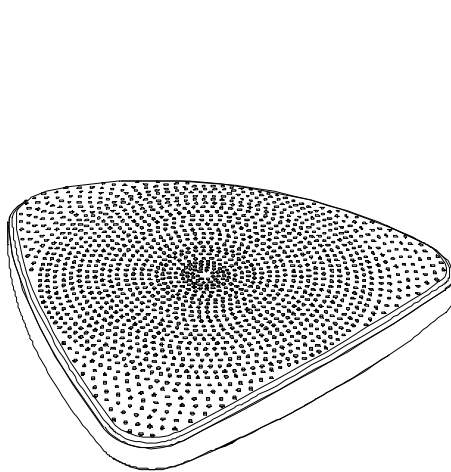


CIRCUIT DIAGRAM TRANSFORMER

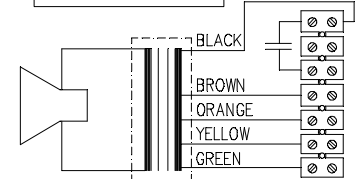

100 V primary nominal tapings


Black : Brown	6,0 W
Black : Orange	3,0 W
Black : Yellow	1,5 W
Black : Green	0,5 W

 CIRCUIT DIAGRAM LOW IMPEDANCE LINE



Sound pressure levels at 1W/1m

SPL vs Freq

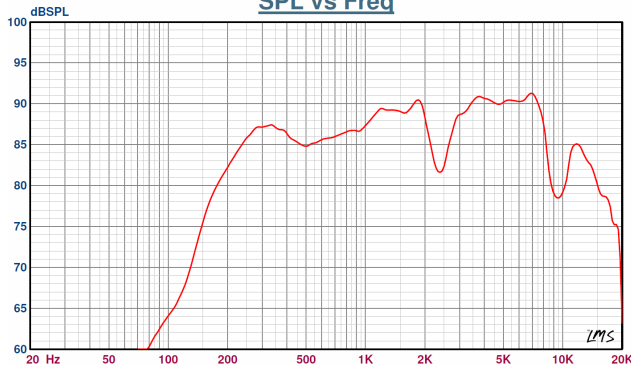

Specifications

Material / Color	ABS / RAL 9010
Mounting	3 screws
Termination	Screw terminal
Weight w/transformer	0,8 kg
IP-rating	
Max. / min. amb. temp	90°C / -20°C
Rated power	6 W
SPL 1W/1m	88 dB
SPL rated power	96 dB
Effective freq. range	150 – 18000 Hz
Dispersion (-6dB) 1kHz / 4kHz	150° / 87°
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- To open the loudspeaker, press the clip on each side of the loudspeaker and separate the cabinet from the chassis.
- Enter the cable trough a suitable cable entrance.
- Fasten the chassis to the wall or roof with three screws.
- Clip the cabinet on to the chassis after termination.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

DNH reserves the right to alter specifications without notice.

